


## Floor Machines How To

### Operation



**1**

- Install pad driver and pad or brush.

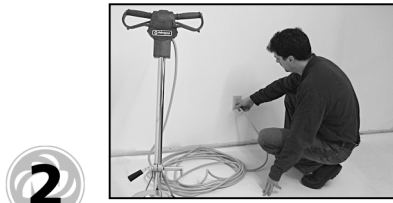


**2**

- Unwrap cord and plug in.




**3**

- Tilt handle back to comfortable position and LOCK into place.

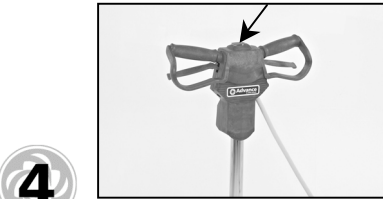

**4**

- Depress safety switch and pull back handles to start machine.

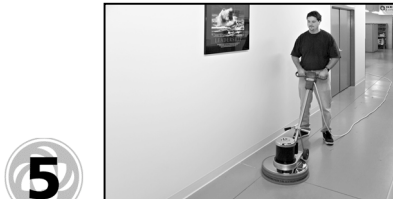

**5**

- Press down slightly to move the machine left, up to move right.

### Storage



**1**

- Clamp handle in upright position.




**2**

- Wrap up cord.



**3**

- Remove pad driver or brush.

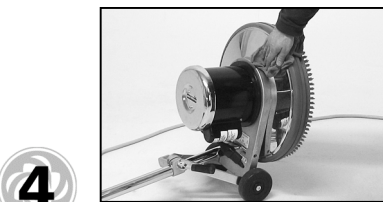

**4**

- Rinse pad driver or brush and wipe off machine.

## **Floor Machine How To**

### **Maintenance**

**1**




- Check power cord jacket for cuts, abrasions, and for proper grounding.

**2**




- Verify handle clamp is properly adjusted.

**3**

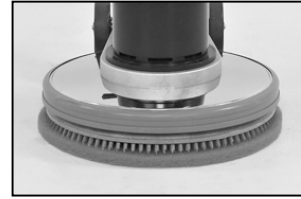

- Check if bumper is in need of replacement.

**4**

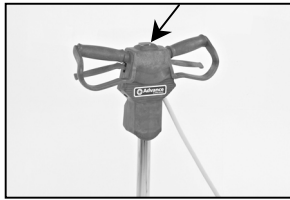

- Verify safety switch is functioning properly.

**5**



- Check transport wheels for damage.